

B10003

September 11, 2007


KEYBOARD WATERTIGHT IMPROVEMENT


If you have hand reader with serial number **WITHOUT** letter **A** on the end and you are using HHR in extremely wet environment it is possible to improve watertight in following way:

You have to use a glue in syringe we sent for you.
Used glue: SP4533 produced by 3M company. You can use any silicon glue **based on WATER**.



Put on a little glue along around the keyboard.

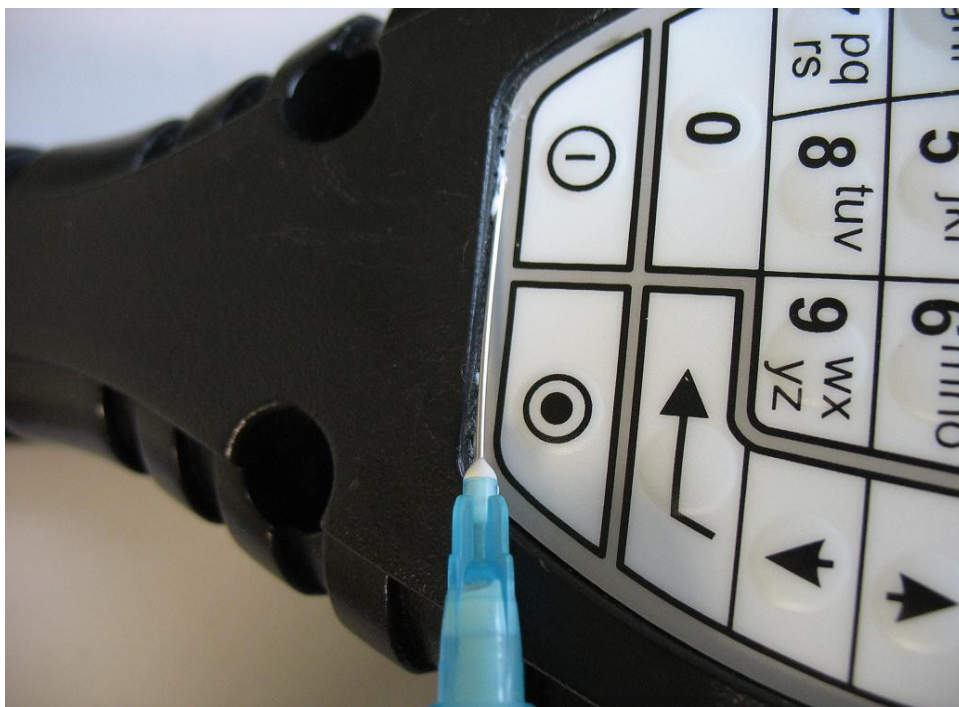

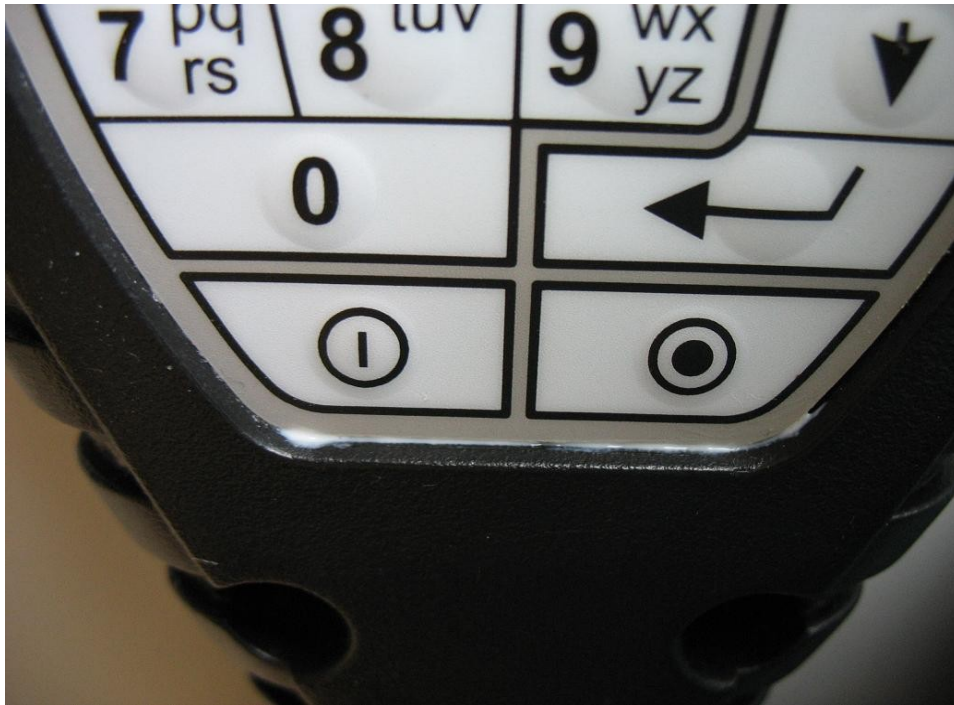

Glue just after apply.



Glue after dry up.

Give a glue at least 24 (48 hours preferable) hours before expose to water.

With best regards,

BioControl / Mobile Readers